

CABINET PARTS

Illus. Part No. No. DESCRIPTION	Illus.	Part No.	DESCRIPTION	Illus No.		DESCRIPTION
1 Literature Parts 8577188 Installation Instructions	14 15	3394083	Front Panel (2)	29 30 31	695737	Strike, Door Door, Rear Door, Front
W10042910 Sheet, Cycle Feature 8578183 Use & Care Guide W10042930 Tech Sheet	16		Foot, Dryer Foot-Optional (Extended Length Package of 2)	32	3393549 3403110 W10095180	Black Handle, Door White
W10042920 Sheet, Feature Resource Saver Following May Be Purchased	17	279318	(Not Included) Terminal, Tinned & Brass (3) (Includes	33 34		Seal & Bearing Assembly Terminal Block
DO-IT-YOURSELF REPAIR MANUALS	18		Illus. 34) Cabinet (Includes	35 36		Kit (For Terminal Block) Screw, 10–32 x 5/8 Block, Terminal
677818 Dryer		8530603 8530605	Black	37 38	8066217	Hinge, Top (2) Idler & Pulley
2 343641 Screw, 10–16 x 1/2 3 693995 Screw, 8–18 x 3/8 4 8541400 Bracket, Cabinet 5 3396795 Cover, Block	19 20 21	18776	Clip, Ground Lock, Front Top (2) Panel, Front	39 40 41		Assembly Belt, Drive Base, Motor
6 342043 Screw, 10–32 x 3/8 7 3396805 Panel, Rear 8 8546676 Clip,	23		Black Clip, Felt Pad (3)	42 43	8066184	5/16–18 x 3/4 Pulley, 60 Hz. Motor Assembly
Door Spring 9 98669 Locator, Top 10 3406107 Door Switch	24 26 27	337189	Catch, Door Assembly Clip, Hinge (2) Screw, 8–18 x 3/8	43 44 45	660658	60 Hz. Clamp, Motor Clamp, Motor
Assembly 11 697773 Screw, 6–20 x 7/8 12 18849 Pad, Top Hinge 13 3357011 Screw, 10–16 x 1/2	28		Hinge, R.H.	46 47	3390731	(W/Shield) Seal, Door Screw, 10–16 x 1/2


TOP AND CONSOLE PARTS

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

Illus	. Part		IIIus	. Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	8274261	Panel, Rear	12	237446		28	3397269	
		Console			(Top/Chute)			(Timer)
2		Harness, Console	13	688983	Screw, 8-18 x 5/8	29	3347243	
3	693995	Screw, Hex Head	14	8533951	Screw, Grounding			6–Circuit
4		Cap, End (L.H.)	15	3395683	Connector	30	94614	Terminal
	8566035	White			(Motor)	31	3977456	Switch,
	8566037	Black	16		Top			Push-To-Start
5	3405151	Switch, Signal		W10028870	White	32		Timer Knob
6	388326	Screw, Console		W10028890	Black			Assembly
7		Knob,	17		Knob, Control (3)		W10034750	Silver
		Push-To-Start		W10034380		33	3936144	Connector
	W10034770	Silver	l 18	3394427	Clip-Harness	34	8566052	Bracket, Control
8		Cap, End (R.H.)	l 19	8312709	Clip-Console	35		Panel, Control
	8566032	White	21		Timer, 60 Hz.			(Includes
	8566034	Black	22	8299970				Illus. 20)
9	3405152	Switch,			Temperature		8566077	
		Wrinkle Shield	23	3405281	•	36	343641	Screw, 10-16 x 1/2
10		Screen, Lint	24		Control Board	37		Heat Relay
	8557857	White	25	8533971	Screw, Mounting	38		Screw, 6-20 x 3/8
	8557859	Black			(8–18 x 5/16)	39		Connector,
11	8536939	Clip, Spring	27	8299897				7-Circuit

BULKHEAD PARTS

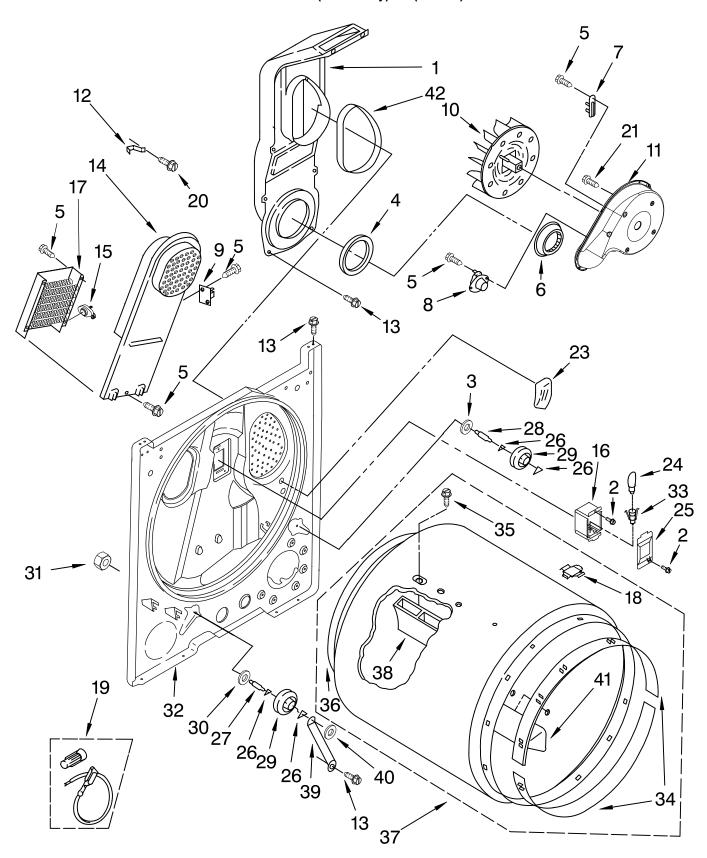

BULKHEAD PARTS

Illus. No.	Part No.	DESCRIPTION				
1	348368	Lint Chute Assembly				
2 3 4	487909 3388703 347139	Screw, 8–15 x 1/2 Washer–Support Seal, Lint				
5 6 7 8 9	90767 696302 3390719 8577274 3977393	Thermal Fuse Thermistor Thermal, Cut-Off (Includes				
10	694089	Illus. 15) Wheel, Blower (Includes				
11 12 13 14 15	8577231 3398161 343641 8541818 3404153	Screw, 10–16 x 1/2 Box, Heater Thermostat, 180°F				
16	3977373	(82.2°C) Bracket, Drum Light				
17 18	3401338 8066086	Element, Heater Drum Hole				
19	279457	Plug Wire Kit, Terminal (For Heater Element Wiring Harness Repair)				
20 21 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42	489463 3390647 3976479 3406124 3402841 690997 3399506 3399507 3397590 348197 3359452 3403414 3403634 692526 97787 3406130 695587 692490 3976434 90296 3403636 339956	Screw, 8–18 x 5/8 Screw, 8–18 x 1/2 Pad, Sensor Bulb Lens, Drum Light				

OPTIONAL PARTS (NOT INCLUDED)

For Models: WED5900SW0, WED5900SB0 (White/Grey) (BLACK)

Illus. Part

No. No. DESCRIPTION

ACCESSORY PARTS

279948 Kit, Dryer Repair 3406839 Dry Rack 8522199 Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2oz.)

72017 White 4392899 Biscuit 72032 Black

PAINT, PRESSURIZED SPRAY

(12 oz.)

350930 White 4392901 Biscuit 786020 Black 350938 Primer, Gray

PAINT, BULK (1 qt.)

799344 White (Uncut) 4392900 Biscuit(Uncut) 786032 Black